



# TOP ARROW STENCIL:

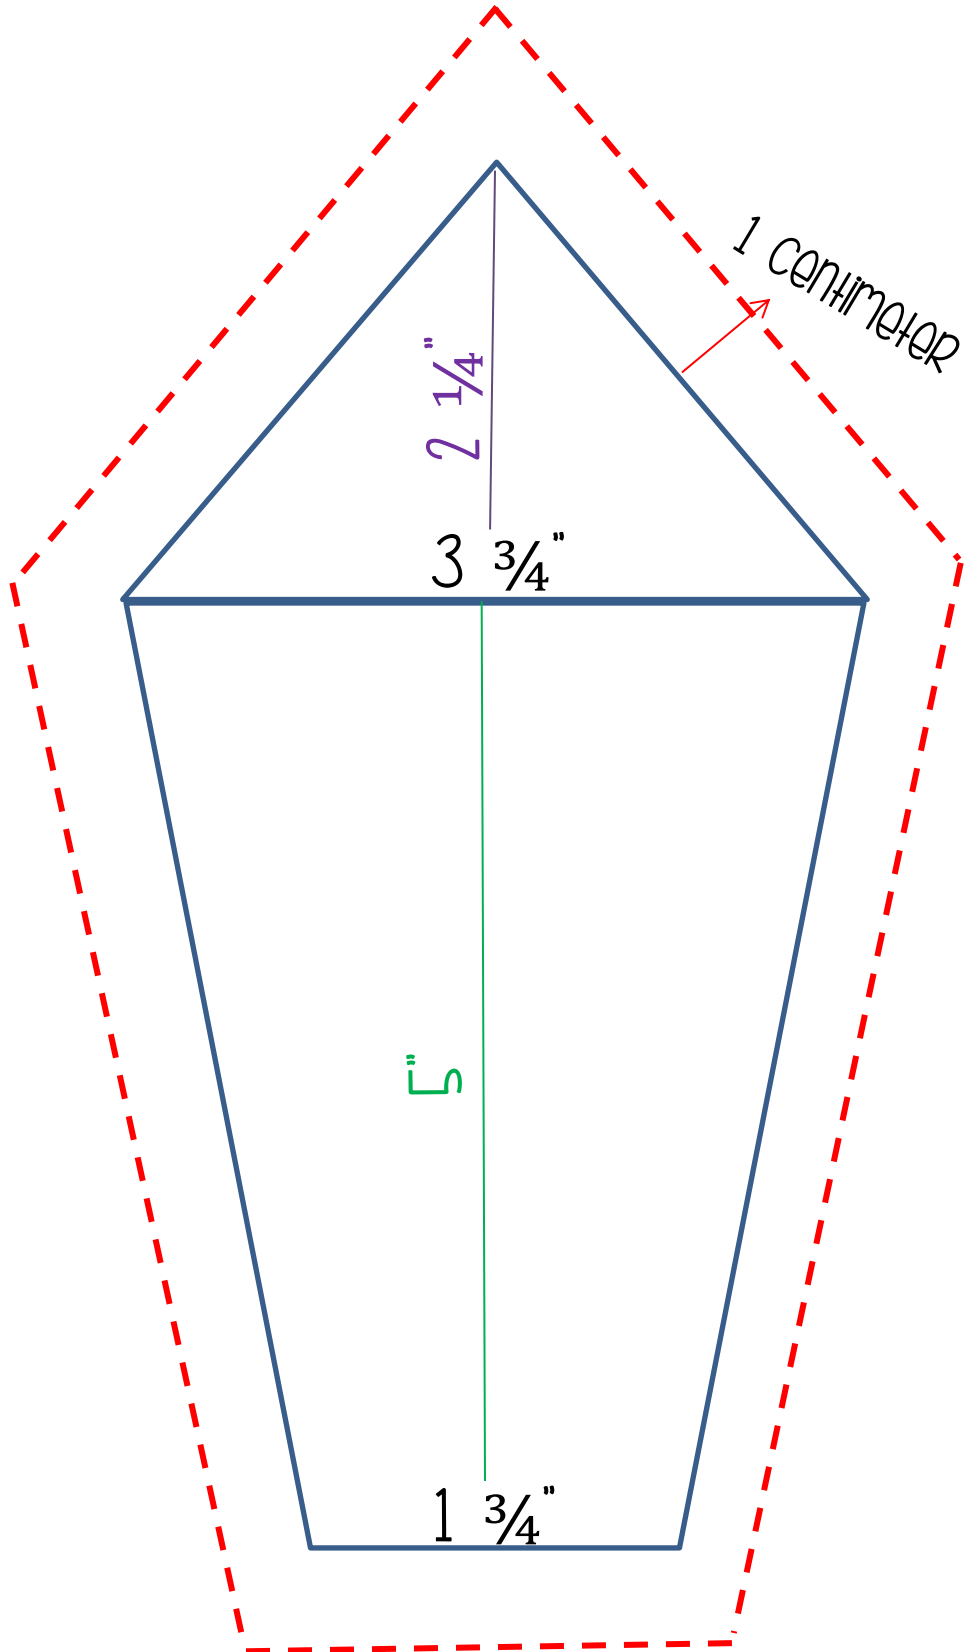

BOTTOM  
ARROW  
STENCIL:

DIY Pouf  
Marykottong.com

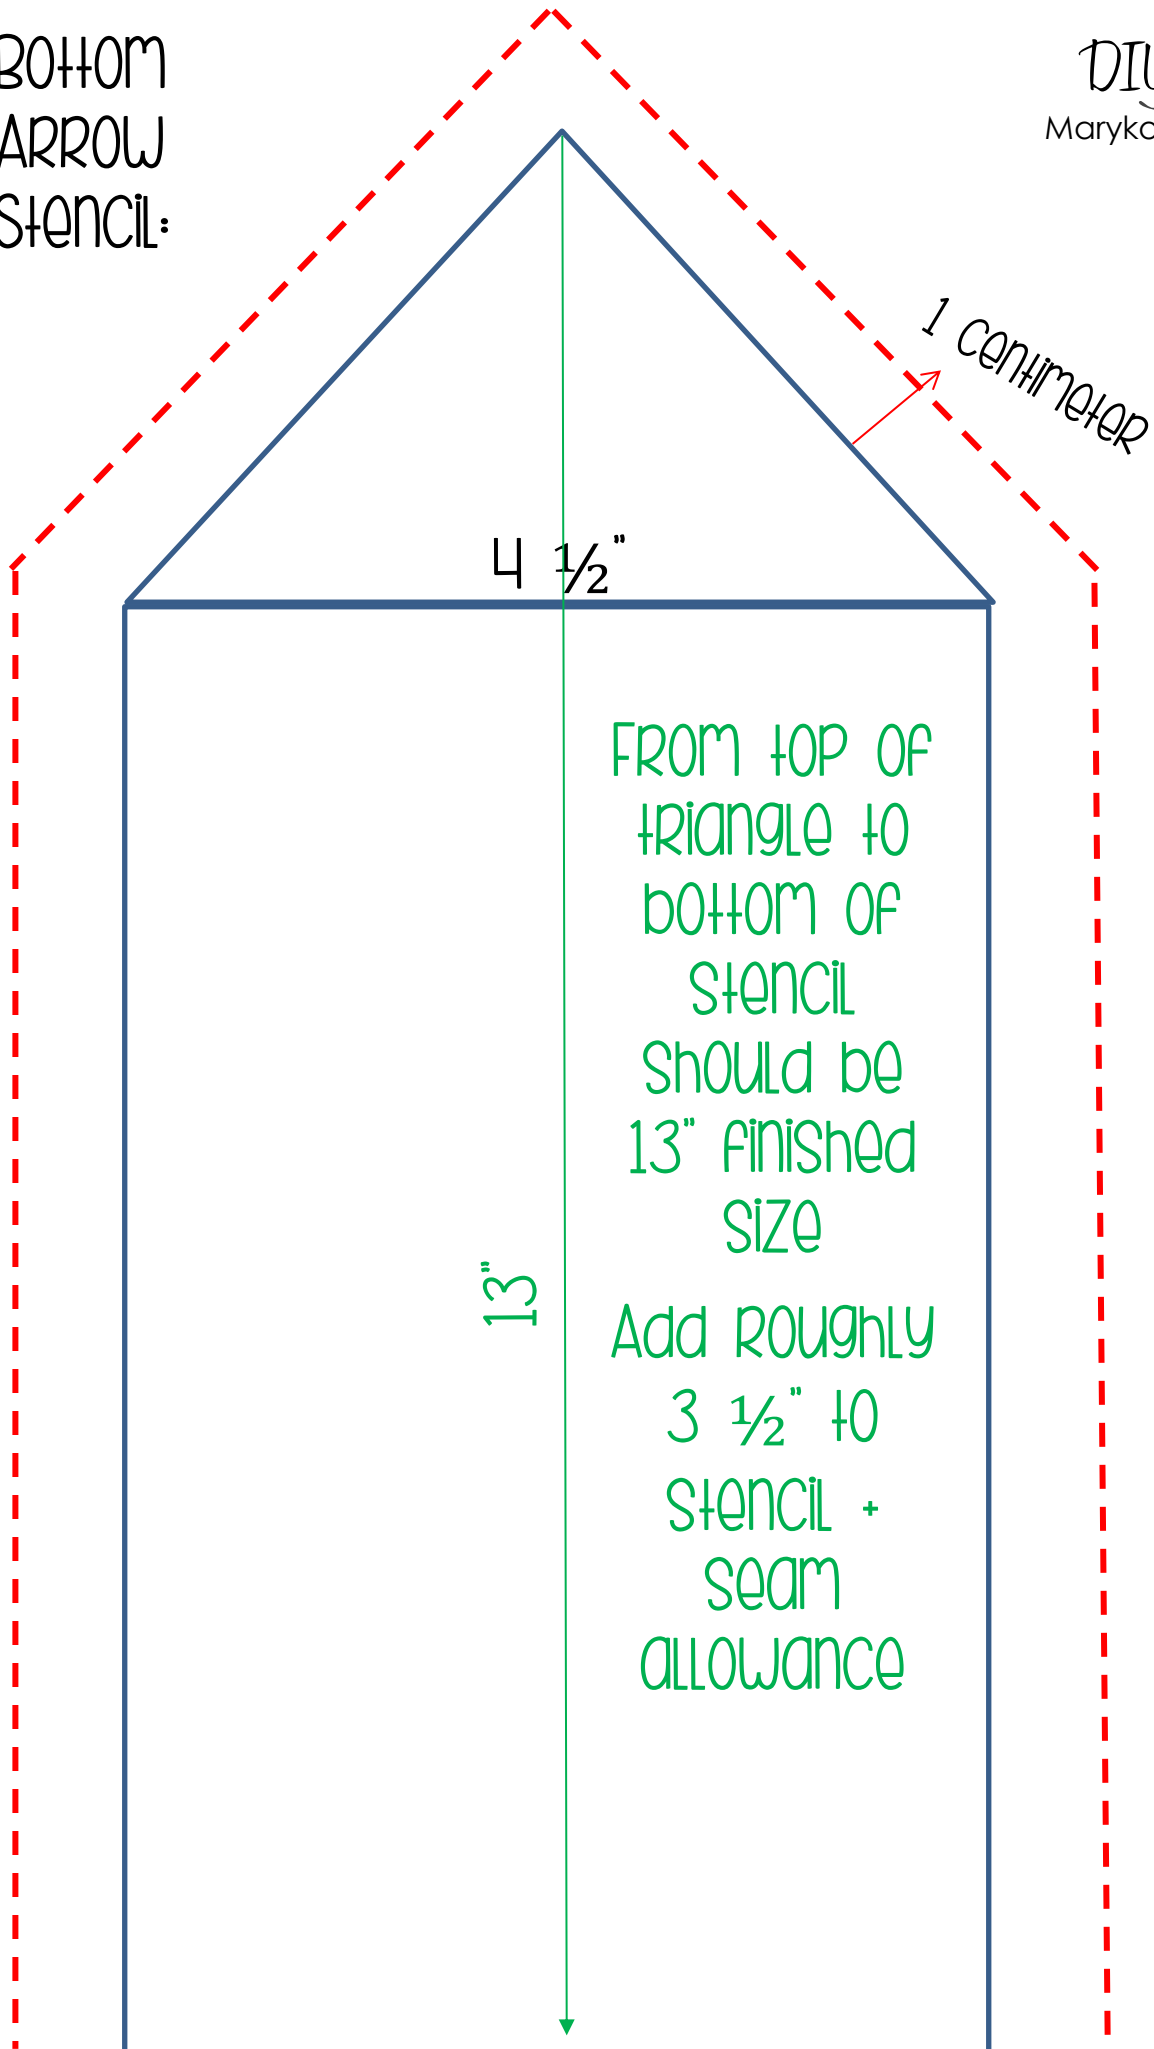

4 1/2"

1 centimeter

13"

FROM TOP OF  
TRIANGLE TO  
BOTTOM OF  
STENCIL  
SHOULD BE  
13" FINISHED  
SIZE

ADD ROUGHLY  
3 1/2" TO  
STENCIL +  
SEAM  
ALLOWANCE